

dji OSMO POCKET 4

Quick Start Guide

快速入门指南

Creator Combo
全能套装

Kamera- opis produktu

v1.0



Contact
DJI SUPPORT



微信扫一扫
获取技术支持



YCBZSS00347503

This content is subject to change without prior notice.

DJI is a trademark of DJI. OSMO is a trademark of DJI OSMO.


OSMO POCKET is a trademark of DJI OSMO.

Copyright © 2025 DJI All Rights Reserved.


1




2

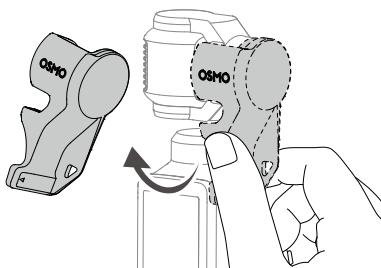


3

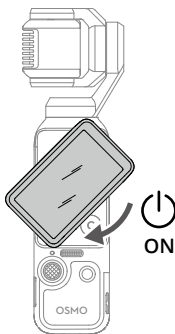



4

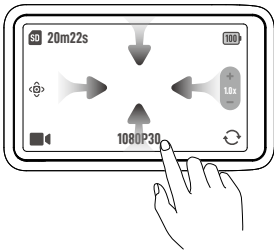



5

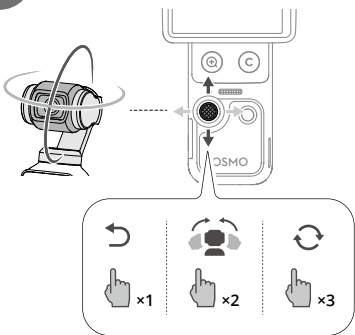



6

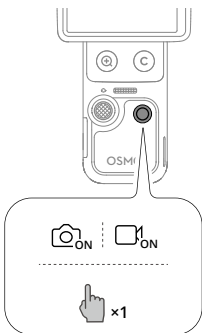
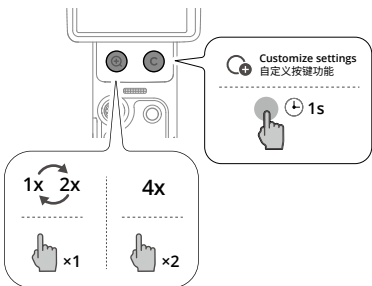


7

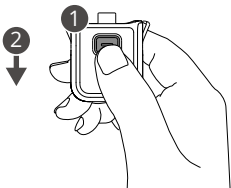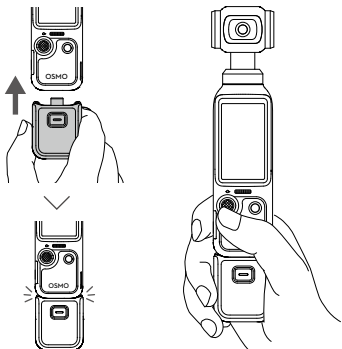




8

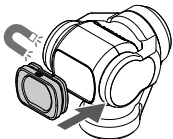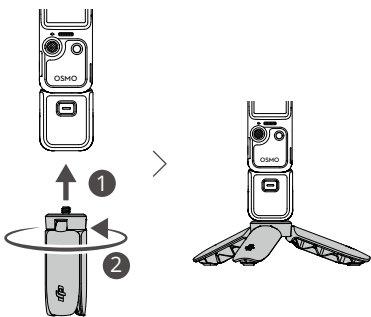


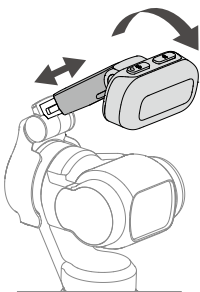
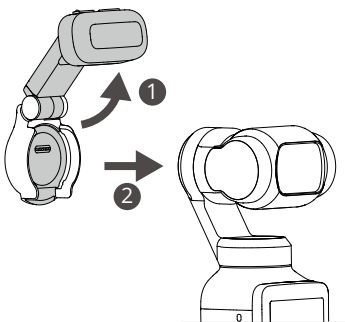


Brightness
亮度



Color Temperature
色温

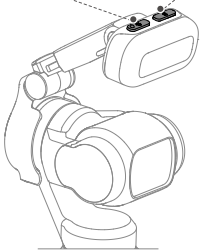
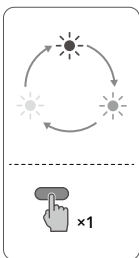
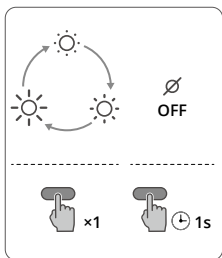


10

 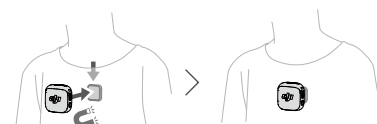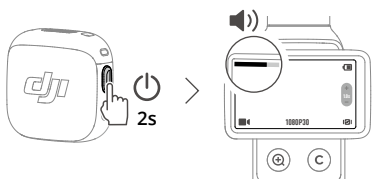

11

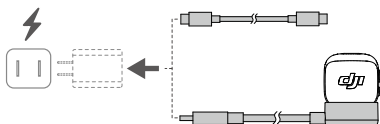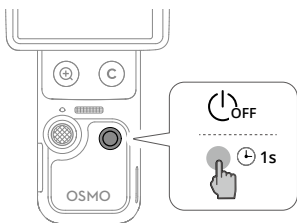

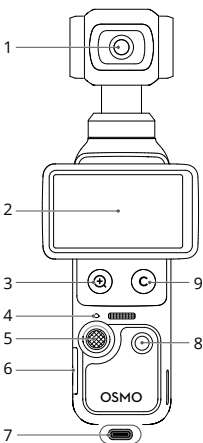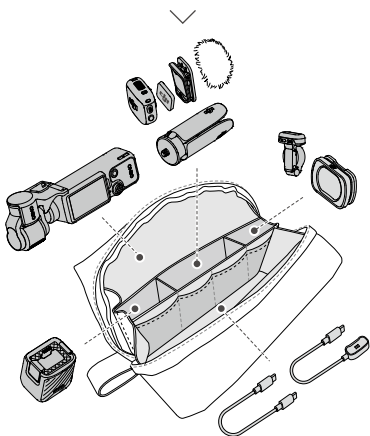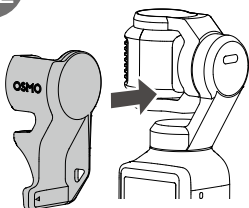

EN

1. Camera
2. Rotatable Touchscreen
3. Zoom Button
4. Status LED
5. 5D Joystick
6. microSD Card Slot with Cover
7. USB-C Port
8. Shutter/Record Button
9. Custom Button (Press and hold to customize button functions)

CHS

1. 相机
2. 可旋转触摸屏
3. 变焦按键
4. 状态指示灯
5. 五维摇杆
6. microSD 卡槽 (含保护盖)
7. USB-C 接口
8. 拍摄按键
9. 自定义按键 (长按修改按键功能)

PL

1. Kamera
2. Obracany ekran dotykowy
3. Przycisk powiększenia
4. Wskaźnik LED stanu
5. Joystick 5D
6. Gniazdo karty microSD z pokrywą
7. Port USB-C
8. Przycisk Migawka / Nagrywanie
9. Przycisk niestandardowy (Przytrzymaj, aby dostosować funkcje przycisku)