





Quick Start Guide

Mini-Mi




Mini-Mi

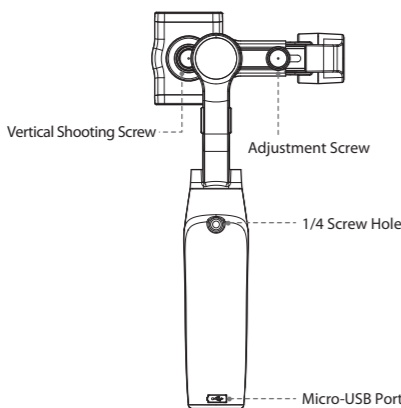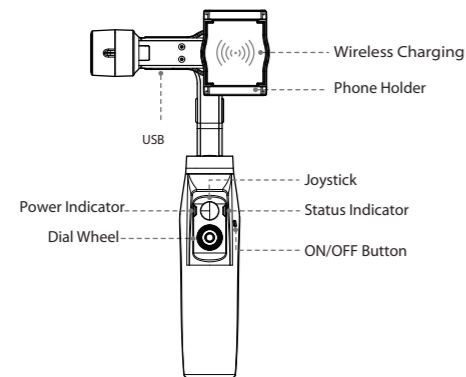


Phone Mounting

Stretch the holder and place your phone into it, following the directions as shown on image A

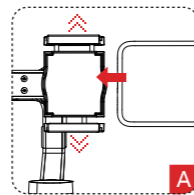


Vertical Shooting Mode

Loosen the knob screw on the back of the holder, pull the holder out 5mm, rotate the holder clockwise 90°, and then tighten the screw.

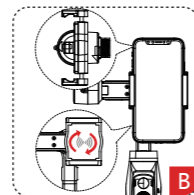


Balance Adjustment

If the phone can't keep level, you can loosen the adjustment screw on the roll arm, then adjust the length of the arm to achieve balance.

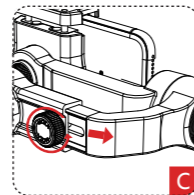

Starting Up

- ON/OFF Button
- Long press: on/off
- Single press: standby/wake up
- Double press: start/stop wireless charging

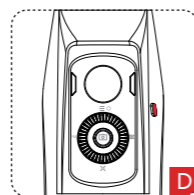

Battery Level Viewing


Power indicator

- Steady blue light for upper and lower indicators: 70%-100% battery level
- Steady blue light for lower indicator: 30%-70%
- Flashing blue light: 0-30%
- Steady red light: charging




Gimbal Charging

Flashing blue light indicates the gimbal needs to be charged in time. MOZA Mini-Mi has a universal USB port which is compatible with phone chargers and power banks.

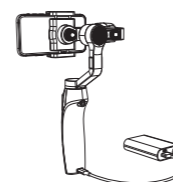


Phone Charging

Magnetic coils in the holder can make phones with wireless charging function like iPhone 8, Samsung S6 get charge wirelessly. For the phones that don't have wireless charging, there is a universal USB port in the pitch arm.

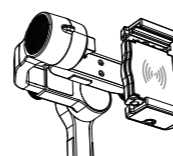

Joystick


- Move the joystick upwards/downwards/leftwards/rightwards to control the movement of phone camera.

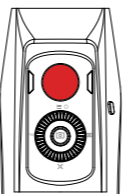

Follow Modes

Status indicator


- Upper light is on: pitch axis follows
- Upper light is off: pitch axis locks
- Lower light is on: yaw axis follows
- Lower light is off: yaw axis locks

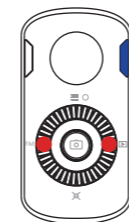

Left button of the dial wheel

- Double press: yaw axis locks/follows
- Triple press: pitch axis locks/follows
- Long press: roll follow

- Right button of the dial wheel
- Double press: Sport Gear Mode

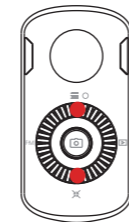

Quick Operation

Lower button of the dial wheel

- Double press: re-center (back to the starting point)
- Triple press: selfie (phone's rear camera facing to the operator)

- Upper button of the dial wheel
- Triple press: Inception Mode



APP for Ios


Camera Interface

	Single press the center button: start/stop recording (only valid in video mode)
	Double press the center button: photo taking (also valid during the video recording)
	Double press the upper button: switching video mode & photo mode
	Long press the upper button: switching front camera & rear camera
	Single press the right button: Quick playback
	Single press the right button to return to the camera
	Rotate the dial wheel: Zoom ZOOM IN ZOOM OUT

Menu

On the camera interface, single press the upper button to enter the menu


- Rotate the dial wheel or single press the upper/down button to select an item
- Single press the left button to enter the next step
- Single press the right button to return to the previous step

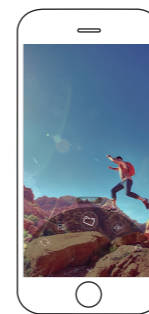

Professional Mode




Enter the menu to select "professional mode", parameter setting icons will appear at the bottom of the screen, which can be used to set shutter, ISO, focus, white balance and so on. Press the upper/down button to select corresponding parameter icon, values will appear at the right of the screen, then rotate the dial wheel to adjust values.

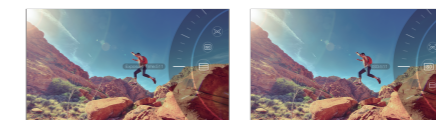

Shutter

ISO

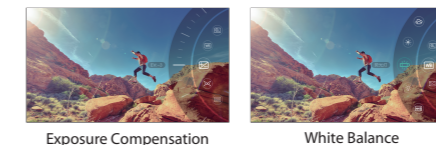

Exposure Compensation


White Balance




Support 3 focusing modes: single auto-focus, continuous auto-focus and manual focus
In manual focusing mode, rotate the dial wheel to focus
After exiting menu, the dial wheel cannot be used for focusing operation.

Object Tracking


1. Short click the setting icon to activate the shortcut bar

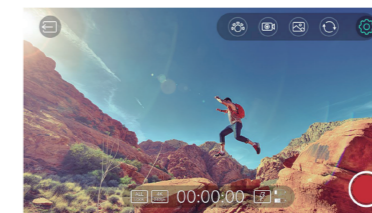

2. Select and click the tracking icon

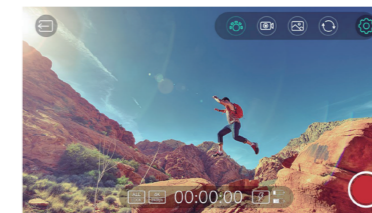

3. Touch screen to draw the target person or object, a green box appears

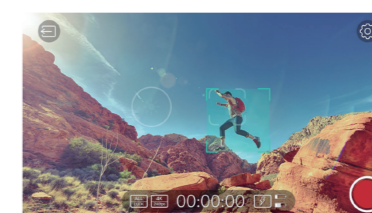

4. Object in the greenbox is the tracking target, the gimbal will move with the target
Click the tracking icon again to exit

SPECS

Gimbal	
Max Payload	300g
Wireless Charging	5W Output
Dual-side Quick Launch	Both left and right
Extension Hole	Four 1/4 screw holes
Follow Mode	8 follow modes
Manual Positioning	3 directions 1. Tilt 2. Yaw 3. Roll (off by default)
Sport Gear Mode	Support
Vertical Mode	Support (Manual rotation/Software)
One - key Recenter	Support
One - key 180°	Support
Power Supply Interface	5V 2A USB Port from gimbal to phone
App	
Built-in Camera	Support
Shooting Control	Support
Focus	Support
Zoom	Support
Object Tracking	Support
Time-Lapse	Support
Panorama	360°/ 180°
Slow Motion	Support
Manual Mode	Support
Quick Play-back	Support
Basic Performance	
Gimbal Weight	543g
Gimbal Dimension	143*107*290(W*D*H)
Phone-Dimension	61 to 92 mm
Battery Life (hrs)	10-Hour
Charging Time	3.5-Hour
Mechanical Axis Angle	Yaw axis: ± 360°
	Roll axis: ± 310°
	Tilt axis: ± 165°