

User Manual



NOA III

TABLET TELEPROMPTER

FORTINGE

CONTENTS

ABOUT US..... 3

1 Operating Conditions.....4

2 Safety Precautions4

3 General Introduction 4

 3.1 Product Name.....4

 3.2 Technical Specifications..... 5

 3.3 Components5

4 Product Installation 6

5 Optional Attachments 8

 5.1 Talent Monitor..... 8

 5.2 Microphone..... 8

 5.3 Led Light..... 8

6 Software 9

7 Accessories 9

8 Optional Accessories 10

 8.1 Bluetooth Connection 10

9 Transport Conditions 11

 9.1 Transportation Information..... 11

 9.2 Transport Conditions 11

10 Installation Of The Product 12

 10.1 Placing On The Work Place 12

 10.2 Assembly..... 12

11 Technical Service 12

12 Warranty Certificate..... 13

 12.1 Warranty Conditions 13

13 User Manual Delivery Report..... 14

ABOUT US

Fortinge is a Publishing Technology Company that aims to be known for innovation and development in the industry and develops products in line with this goal.

We develop products within the framework of efficiency and accessibility by analyzing the needs of different customer segmentations. In this context, while we produce solutions for large TV Studios that use the most advanced infrastructures, we also market suitable products for smaller studios and individuals who broadcast by scaling these solutions.

In addition to our hardware solutions, we develop and present our software products that will work in the most compatible way with these products to our customers.

We continue to work with high motivation with our team members who are experts in their fields, our customers, and dealers in more than 60 countries to achieve our goals of continuous innovation and development, complete customer satisfaction, and is a leading company in the sector.

MANUFACTURER DETAILS

Company Name : AKRATEK ELEKTRONİK SAN. İÇ VE DIŞ TİC. LTD.ŞTİ
Company Address : Zümrütevler, Ertuğrul Sk. No:10, 34852, Maltepe/İstanbul
Telephone : +90 216 291 22 30
Fax : +90 216 291 22 34
E-mail Address : info@fortinge.com
Web Address : <http://www.fortinge.com/>

1 Operating Conditions

The NOA III Tablet Teleprompter is easy to use, with tool-less assembly and light-weight design, allowing you the freedom to perform your speech anywhere you want.

2 Safety Precautions

Care must be taken during disassembly, unpacking, and transportation of the device. These operations are critical to ensure both the protection of the product and the safety of the user. It is strongly recommended to follow the safety precautions below:

Disassembly must be performed carefully and using appropriate methods. Improper disassembly may damage the internal components or pose safety risks. When unpacking, sharp tools must be used cautiously to avoid damaging the device's surface or sensitive components.

During transportation, the device should be kept in the recommended position and protected against falls, impacts, or sudden shocks.

As the device contains glass components, which are prone to breakage, extreme caution must be exercised during transportation. Protective packaging materials should be used, and strong impacts must be avoided.

3 General Introduction

3.1 Product Name

Fortinge NOA III Tablet Teleprompter



3.2 Technical Specifications


Supported Tablet Size	13"
Glass	70/30 Prompter Glass
Glass Thickness	2 mm
Plate	Quick Release
Weight	1,1 Kg / 2,4 lb (without camera and tablet)
Compatible Products	DSLR & ENG up to 2,5 Kg / 5,5 lb
Reading Range	15 FT/ 4,5 M
Software	Forprompt (IOS & Android) Free
Bluetooth Version	BLE 5.2

3.3 Components


Parts	Piece
Main Rods	1
Hood	1
Glass	1
Tablet Holder	1
Bolts	2
User Manual	1

Mechanical Construction
without any tools.


4 Product Installation

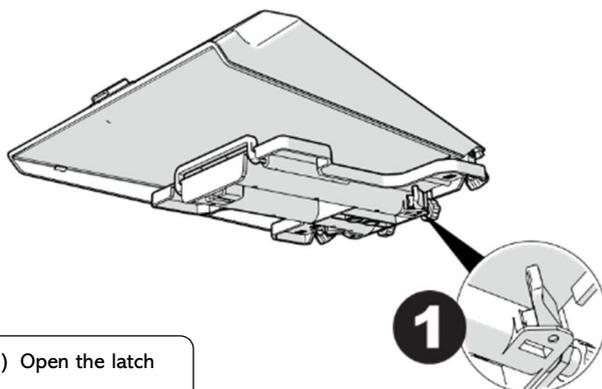


1) Open the latch

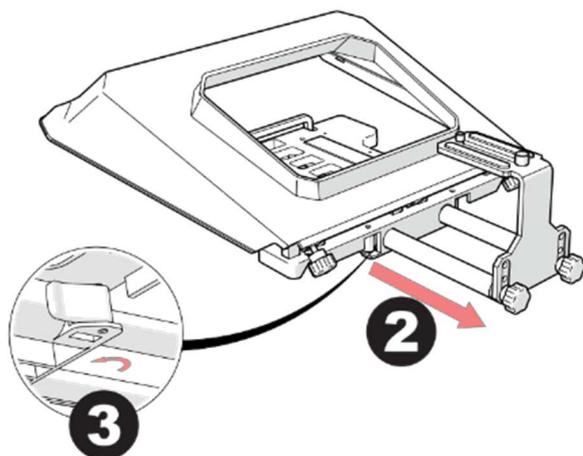

2) Pull the main rods.
3) Close the latch.

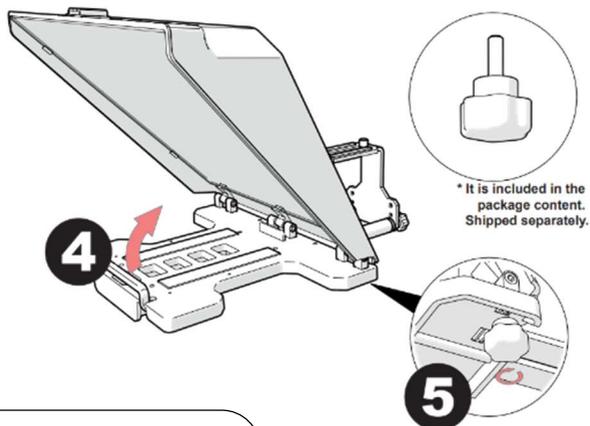

- 4) Lift the hood carefully. Before installation, please remove the bolts if they are already in place.
- 5) Secure it with the 2 bolts included in the package.

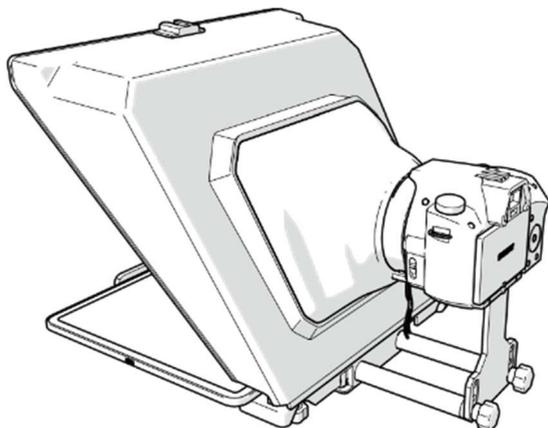

5 Optional Attachments

Includes two Cold Shoe Mounts for additional accessories.

5.1 Talent Monitor

The person in front of the camera (such as a presenter, actor, or speaker) can view their own image in real time using the talent monitor and adjust their position accordingly. This provides great convenience for framing control and on-screen interaction.

5.2 Microphone

It connects to the device's audio input to capture and record the speaker's voice clearly. It is an essential piece of equipment for clear sound transmission during broadcasting and recording.

5.3 Led Light

Used to provide lighting in shooting and broadcasting environments.



6 Software

Download the Forprompt software free from the APP store and Google store pages.



<https://play.google.com/ForPrompt Mobile>



<https://apps.apple.com/ForPrompt Mobile>

7 Accessories



Mini BT1 Hand Controller

- Left button: Stops the text with one press; with another press, it scrolls to the bottom.
- Top button: Scrolls the text upward; each press increases the speed.
- Right button: Stops the text with one press; with another press, it scrolls back to the top.
- Bottom button: Scrolls the text downward; each press increases the speed.
- Battery compartment: Uses 1x 3V CR2032 battery.

8 Optional Accessories




BT1 Hand Controller

- Left button: Stops the text with one press; with another press, it scrolls to the bottom.
- Top button: Scrolls the text upward; each press increases the speed.
- Right button: Stops the text with one press; with another press, it scrolls back to the top.
- Bottom button: Scrolls the text downward; each press increases the speed.
- Battery compartment: Uses 2x1,5V AAA batteries.

8.1 Bluetooth Connection

- To begin, open the ForPrompt Mobile application on your device.
- Navigate to the Settings section and enable the Bluetooth controller feature.
- Finally, turn on the Bluetooth device. Once the Fortinge BT1 appears in the list, select it to complete the pairing process.
- The device is now ready to use.

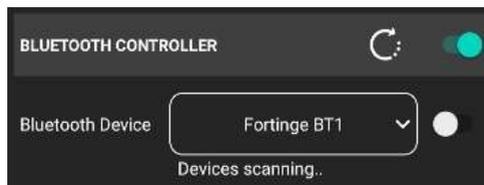

9 Transport Conditions

9.1 Transportation Information

Fortinge NOA III Tablet Teleprompter is divided into the following parts at the time of transport.

- Teleprompter
- Mini BT1 Hand Controller
- Cartoon Box
- Quick Installation

9.2 Transport Conditions

	SCALE	WEIGHT (Net)	WEIGHT (Gross)
NOA III Tablet Teleprompter	40x37x15 cm / 15,7x14,5x5,9 In	1.1 Kg / 2,4 lbs	2,3 Kg / 5 lbs

- The camera must be removed during Fortinge disassembling.



- Be careful while handling, especially on the screen and on the glass



10 Installation Of The Product

10.1 Placing On The Work Place

The installation of the product in the final working area will be carried out by the customer.

Care must be taken, lifting points must be taken into consideration. Otherwise, the buyer will be responsible for the problems that may occur.

10.2 Assembly

The product, which is sent as a box, is assembled by the person to be performed by the authorized personnel of the customer and / or under the supervision of the person.

11 Technical Service

In case of malfunction and maintenance, the spare parts required by the customer will be delivered by the company within the deadline.

Interventions by people not authorized by the vendor within the warranty period will void the warranty terms.

Following the delivery of the product, in case of any failure other than the warranty period, the customer shall provide the service and repair service at the request of the firm in return for the fee.

12 Warranty Certificate

- Product Brand : Fortinge
- Product Name : NOA III Tablet Teleprompter
- Warranty Period : 12 months after delivery

12.1 Warranty Conditions

- Faulty material used while production and any kind of malfunction due to faulty workmanship will be eliminated without any charge from the vendor.
- All kinds of breakage and defects that may occur during the transportation, loading and downloading of the products are not covered under the warranty.
- Failure, breakdown and loss of natural conditions and natural disasters where the products are placed by the customer are not covered under the warranty.
- Breakage and malfunctions resulting from improper use during operation of the products are not covered under the warranty.
- The manufacturer commits and guarantees to provide spare parts and/or service for 10 years.

13 User Manual Delivery Report

Date:/...../20.....

The User Manual of Fortinge NOA III Tablet Teleprompter has been delivered to the customer.

Upon recieval of this manual, the customer shall be deemed to have accepted that all information about the use of the device has been provided in its entirety.

On behalf of
manufacturer Deliverer

On behalf of buyer
Receiver

Name, Surname, Date
Signature

Name, Surname, Date
Signature

